

nedis

Cat6 Wall Box

Surface Mount S/FTP

CCGB89130WT




Package content

Fixing Method




1
Remove the circuit board from the buckle position of the bottom box

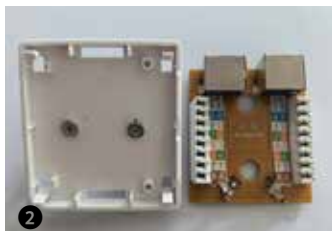

2
Pass the screws through the bottom box, place the product at the customer-specified fixing position, tighten the screws, then reinstall the circuit board back to the original bottom box before proceeding with wiring.



Double-Sided Tape Fixing. Customers can choose to wire first or fix first.

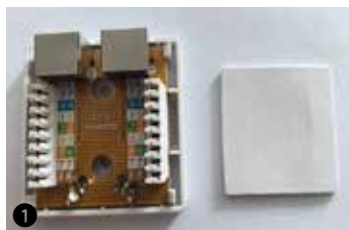

1
Take out the double-sided tape




2
Stick one side of the double-sided tape to the back of the bottom box, then attach it to the customer-specified desktop


Wiring




4 Open the ethernet surface mount box

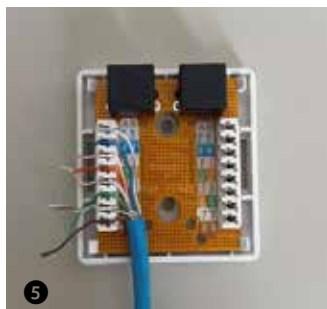

5 Push the wires into the IDC according to T568A/T568B color code

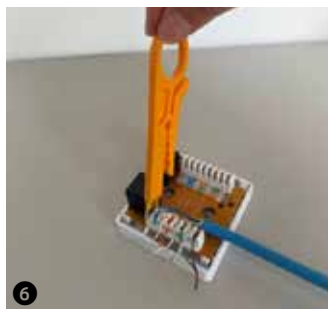


6 Impact and fix the wires by 110 or Krone impact tools, cut off the excess wires

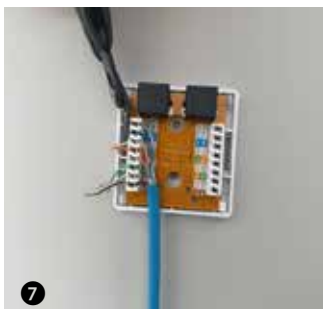


7 Trim the exposed wire cores



8 Trimming completed

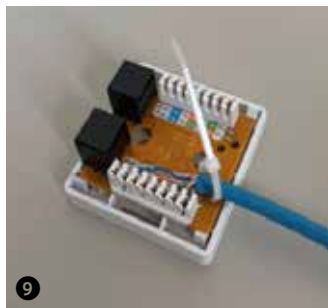

9 Use the cable ties for easy cable management

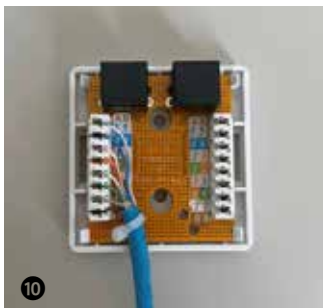

10 Cut off the excess cable ties



11 Assemble the upper cover



For more information see the extended manual online:
<https://cdn.nedis.com/manuals/html/CCGB89130WT>

Nedis BV
Reitscheweg 1
5232 BX 's-Hertogenbosch
The Netherlands
service@nedis.com

